

# SIMPLE TIPS

to help you Tame The Wild with your Spectracide®  
AccuShot™ Continuous Power Sprayer



## Set Up Your AccuShot™ Sprayer

The operating instructions on the back label will help you get your sprayer set up and take care of most troubleshooting questions.



## Make Sure Your Sprayer Is Unlocked

Just below the trigger is a small lock/unlock button. Unlock by lightly pushing downward on the raised tab with a fingernail until it snaps into place.



## Make Sure Your Sprayer Nozzle Is On

If the raised arrow on the top of the nozzle is pointing to X it is CLOSED. Twist to the desired spray setting — SPRAY or STREAM. Remember to twist the nozzle back to CLOSE after using.



## Make Sure Your Sprayer Is Primed

Hold the sprayer and bottle level to the ground and each other, straight out in front of you, and squeeze the trigger. When your AccuShot Sprayer begins to spray, you are ready to Tame the Wild.



## Inspect Your Sprayer Carefully

If this isn't the first time you have used your AccuShot Sprayer, look for kinks, cracks, signs of wear or loose connections. These can all affect the sprayer's performance.



## Replace The Batteries

If this isn't the first time you have used your sprayer, you may need a power upgrade. Follow the instructions on the back label to properly replace the four AA batteries.